# Laser OWL Operations Guide Singlemode Light Sources



**Optical Wavelength Laboratories** 

COV	NIENIS	PAGE
1.0	GENERAL	2
2.0	FUNCTIONAL DESCRIPTIONS	2
3.0	APPLICATIONS 3.1 PRECAUTIONS 3.1.1 Safety 3.1.2 Operational 3.2 REQUIRED ACCESSORIES 3.2.1 Cleaning Supplies 3.2.2 Patch Cords 3.2.3 Optical Fiber Adapters 3.3 TYPICAL APPLICATIONS	3 3 3 3 3 3 3 3 3
4.0	MAINTENANCE / CALIBRATION	4
5.0	WARRANTY	4
6.0	SPECIFICATIONS	4
FIGU	URES	
Figure 1 - Laser OWL Singlemode Laser Source		2

## 1.0 GENERAL

Thank you for your purchase of an Optical Wavelength Labs (OWL) Laser OWL singlemode laser source.

The source is simple to operate with a single switch controlling power and selecting the output wavelength. LED indicators highlight the selected source and verify that battery power is sufficient to maintain the calibrated output power.

The Laser OWL is a laser-based light source designed to test singlemode fiber optic links. The laser outputs are temperature compensated and are calibrated to couple -10dBm of optical power into singlemode fiber. The LED indicators show whether the unit is ON or OFF, and whether the battery has enough power to maintain its calibrated output power. Dual 1310 and 1550nm laser sources provide dual wavelength testing that conforms to international testing standards.

Each Laser OWL comes with a protective rubber boot, carrying strap, CD-ROM based operations manual, and a 9-volt battery.

Typical uses include telecommunications networks, data networks, cable television, and industrial equipment control.

# 2.0 FUNCTIONAL DESCRIPTIONS



Figure 1 - Laser OWL Singlemode Laser Source

- 1. 1310 nm port This port houses a 1310 nm singlemode source and can be either a ST, SC, or FC connector.
- 2. Power/Wavelength selector switch This switch toggles to 3 positions. Center position is OFF, the left position powers on the 1310 nm LED, and the right position powers on the 1550 nm LED.
- 3. 1550 nm port This port houses a 1300 nm multimode source and can be either a ST or SC connector.
- 4. 1310 nm Indicator LED This LED indicates the ON/OFF status of the 1310nm LED source.
- 5. 1550nm Indicator LED This LED indicates the ON/OFF status of the 1550nm LED source.

NOTE: During normal operation, if the indicator LEDs are not lit, this indicates that the battery has insufficient power to provide accurate readings and must be replaced.

# 3.0 APPLICATIONS

### 3.1 PRECAUTIONS

- 3.1.1 Safety Caution must be exercised when working with optical equipment. Most transmission equipment and light sources use light that is invisible to the human eye. High energy light is potentially dangerous, and can cause serious, irreparable damage to the eye. Thus, it is recommended to **NEVER** look into the connector port of a light source or the end of a fiber.
- 3.1.2 Operational In order to ensure accurate and reliable readings, it is vitally important to clean ferrules containing optical fibers and optical connector ports. If dirt, dust, and oil is allowed to build up inside connector ports, this may scratch the surface of the laser source, producing erroneous results. Replace dust caps after each use.

## 3.2 REQUIRED ACCESSORIES

- 3.2.1 Cleaning Supplies It is recommended to clean fiber ferrules before each insertion with 99% or better isopropyl alcohol and a lint free cloth. A can of compressed air should be available to dry off the connector after wiping, and to blow out dust from bulkheads.
- 3.2.2 Patch Cords Patch cords may be needed to connect the Laser OWL to the system under test. The connector styles on the patch cord must match the type on the Laser OWL and the type of the system under test.
- 3.2.3 Optical Fiber Adapters Optical fiber adapters are used to connect two connectorized fibers together, and may be necessary to adapt your patch cords to the system under test.

### 3.3 TYPICAL APPLICATIONS

The Laser OWL singlemode laser source can be used as a diagnostic and measurement tool of optical transmission systems and fiber optic links. These applications can be found in several industries, including premise, LAN, CATV, and Telco.

The Laser OWL singlemode laser source is designed to emit a temperature-stabilized source of light to be used for optical loss measurement. The Laser OWL serves as an optical reference, which is otherwise known as the "zero" point when a power meter is "zeroed". Optical loss measurements are useful for measuring the attenuation, or loss, of a fiber link. The loss value can then be compared to a pre-calculated link budget, which is used to determine if the fiber link will operate within the parameters of the transmission equipment.

The formula for calculating loss in a fiber link is:  $L = P_a - P_r$ 

where  $\bf L$  is the amount of optical loss in dB,  $\bf P_a$  is the absolute power in dbm, and  $\bf P_r$  is the reference power in dBm.

Optical loss measurements can also be used for fiber optic link certification. Link certification is a process where optical loss measurements are compared to a link budget calculated using fiber optic cabling standards.

# 4.0 MAINTENANCE / CALIBRATION

- 4.0.1 Repair of this unit by unauthorized personnel is prohibited, and will void any warranty associated with the unit.
- 4.0.2 The battery compartment is covered by a sliding plate on the back of the unit. Remove the rubber boot to expose the back of the unit. One 9v battery is required for operation.
- 4.0.3 For accurate readings, the optical connectors on the Laser OWL and the connectors on the patch cords should be cleaned prior to attaching them to each other. Minimize dust and dirt buildup by replacing the dust caps after each use.
- 4.0.4 It is recommended to have Optical Wavelength Laboratories calibrate the Laser OWL once per year.

# **5.0 WARRANTY**

- 5.0.1 Optical Wavelength Labs products have a <u>two-year</u> factory warranty, which covers manufacturer defect and workmanship only, valid from the date of shipment to the original customer.
- 5.0.2 Products found to be defective within the warranty will be either repaired or replaced, at the option of Optical Wavelength Labs.
- 5.0.3 This warranty does not apply to units that have been repaired or altered by anyone other than Optical Wavelength Labs, or have been subjected to misuse, negligence, or accident.
- 5.0.4 In no way will Optical Wavelength Labs liabilities exceed the original purchase price of the unit.
- 5.0.5 To return equipment under warranty, please contact Optical Wavelength Labs for a RMA number. To ensure quick turnaround, please include a short description of the problem and a phone number where you can be reached during normal business hours.

Optical Wavelength Labs N9623 West US Highway 12 Whitewater, WI 53190 Internet: owl-inc.com e-mail: owlinfo@owl-inc.com Phone: 262-473-0643

Fax: 262-473-8737

# 6.0 SPECIFICATIONS

Battery Life Battery Capacity Display Operating Temperature Storage Temperature	ST, SC, or FC  1310 ±30nm  1550 ±30nm  2 nm  2 nm  -10.0 dBm  0.1 dB  singlemode  25 hrs.  Yes  0 to 55° C  0 to 75° C
	2.75" x 4.94" x 1.28" 154a
	3

Conforms to the Harmonized European Standards EN 61326-1 and EN 61010-1.